


Clock Making Kit

Our easy to use kit will make you a clock using your covering of choice.

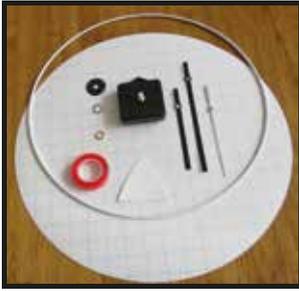

What's in this Box

- 1 X Self Adhesive PVC Panel
- 1 X Painted Metal Ring
- 1 X Roll Double Sided Tape
- 1 X Finishing Tool
- 1 X Clock Assembly (includes 1 Rubber Washer, 1 Brass Washer 1 x Brass Nut)
- 1 X Set of Clock Hands (1x Short Hour Hand, 1x Long Minute Hand, 1x Second Hand)

Preparation - You will need

- * Covering of choice
- * Sharp Knife or Scissors
- * Clean flat working area
- * AA Battery

How to Make



1, Cut down your covering to a workable size, make sure it's flat, iron to remove any creasing.



2, Place your covering face down. Position S/A panel on top and remove some of the release paper.



3, Stick the panel down onto your covering, smooth as you go and remove all the release paper.



4, Cut off surplus covering by running a sharp knife along the edge of the panel or trim with scissors.



5, Snap back the creased edges around the panel until the PVC breaks then remove.




6, The panel is now complete and it's ready for the ring placement.



7, Apply double sided tape to the inside centre of the metal ring.



8, The tape should be on the inside of the ring and the outside should be clean.

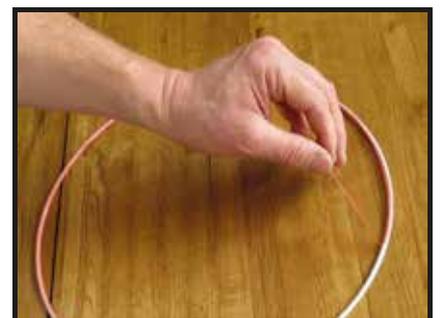

9, Press the tape into the ring and then remove the release paper, the ring is now sticky.



10, Align the ring to the PVC edge of the panel and place down, check the position is in line all round.



11, Pinch the fabric, and pull firmly over the ring and tuck into the sticky tape on the inside of the ring.



12, Use the tool to push the surplus fabric behind the ring for a clean finish.



13, If the tool blunts, use scissors to cut away the blunt edge.



14, Your panel is now complete and we are ready to fit the clock.



15, Remove PVC from centre and pierce fabric so you have a hole to fit clock movement.



16, Remove the brass nut and washer, leave the rubber washer on and insert through the hole.



17, Think about the clock's hanging position, then put on the brass washer and nut and hand tighten.



18, Now you can fit the clock hands, please read instructions below.

Fit the Hour Hand

For support hold the back of the case with one hand, then with your other hand hold the centre of the hour hand firmly and turn, wriggle and push it onto the spindle.

Set the hand to finish pointing at the 12 o'clock position.

Fit the Minute Hand

Repeat the process with the minute hand, again ensuring it is pointing to the 12 o'clock position.

Fit the Second Hand

Just push it on to the spindle enough to ensure it is firmly applied.

Finally! Use the winder on the back of the casing to make sure the hands complete a full 12 hour cycle without touching together.

If they do, just bend them slightly to move them apart.

Now put in your AA battery and that's it. Your clock will start!

