

What's in this Box

- 2 x Rectangle Frames
- 1 x Roll of Double-Sided Adhesive Tape
- 1 x Instruction Sheet
- 1 x Self-Adhesive Panel
- 1 x Finishing Tool
- 1 x Bin Base

Sewing Bin Kit

Preparation - You will need


- * Covering of choice
- * Large clean flat working area
- * Scissors
- * Seam Roller (Optional)



1. Cut down your covering to a workable size. Iron to remove any creases. Place face down and position the panel on top and make sure it fits within the covering.



2. Peel back some of the release paper of the panel and stick down on your covering.

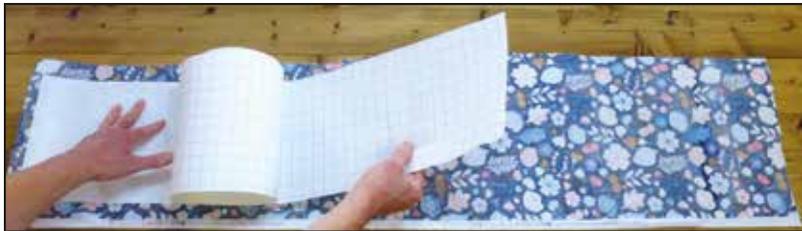

3. Smooth out from the middle and press the adhesive panel onto the fabric firmly until all the release paper is removed.




4. Cut off surplus covering around the panel with sharp scissors to avoid any fraying.



5. Snap back the creased edges (kiss cut) around the panel to break the edge of the PVC.



6. Carefully, to avoid fraying, remove the broken strips of PVC to leave your covering's edge.

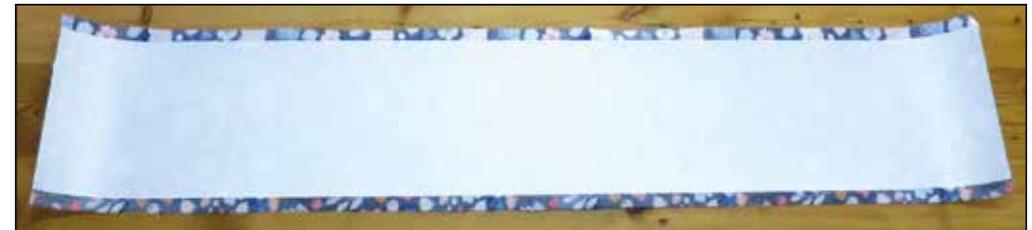


7. Your panel is now ready to attach to the frame.



8. Apply the double-sided tape to the outside edges of the frame.



9. Press the tape down evenly and firmly onto the wire.

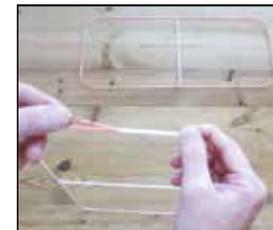

10. Repeat 8 & 9 on the second frame.




11. Remove the release paper and your frames are now sticky to fix your panel.



12. The panel has pre-fitted seam tape, remove the release paper and it's now sticky.



13. The panel has very small score marks 315mm from edge. This is the mark to use to align the frame up with. Use a pencil to make it more prominent.

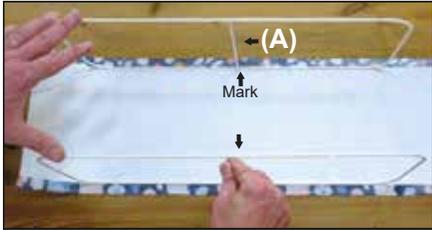

14. Pick up frames and place the centre bar (A) on the pvc edge of marks.



15. Keeping in line with the PVC edge at all times, stick the frame onto the panel.




16. Work towards the seam (12) continue sticking the frame to the panel.



17. When you get to the seam (the overlap), press the tape together from the centre out.



18. Turn over so the seam is now on a hard surface and apply firm pressure pressing the tape down hard with your hand, or use a seam roller.

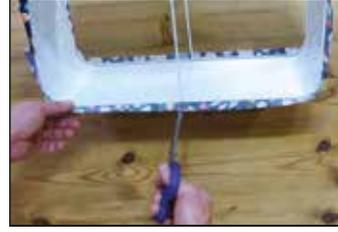

19. Snip the covering in line with the centre bar so that the covering can be folded behind.



20. Pinch the fabric, pull taut and fold onto the sticky frame.



21. Use the finishing tool to push the fabric behind the frame.



22. If the tool gets bent, cut with scissors to refresh.



23. Force the tool between the gap and swipe around the circumference until you're happy with the finish.



24. The base may have a protective film which can be removed.



25. Place the base inside the bin and press down to sit on the lip of the bottom frame.



26. Your Sewing Bin is now complete.