

# Textile Wall Art Kit

## What's in this Box

- 1 x Frame - Circle, Rectangle or Square
- 1 x Self-Adhesive Panel
- 1 x Roll of Double-Sided Adhesive Tape
- 1 x Finishing Tool
- 1 x Instruction Sheet

## Preparation - You will need

- \* Covering of choice
- \* Clean flat working area
- \* Sharp Knife or Scissors
- \* Fixings - Panel Pins / Tacks or Velcro

## Instructions for Rectangle, Square and Circular Frames



*Iron covering to remove any creases!*

1. Cut down your covering to a workable size. Place face down and position the panel on top and make sure it fits within covering.



*Use a weight (tin) to stop panel moving!*

2. Peel back some of the release paper of the panel and stick down on your covering.



3. Smooth out from the middle and press the adhesive panel onto the fabric firmly until all the release paper is removed.



4. Cut off surplus covering by running a sharp knife along the edges of the panel or use scissors, try to avoid any fraying.



*Bend edge backwards and forwards to break!*

5. Snap back the creased edges (kiss cut) around the panel to break the edge of the PVC.



6. Carefully, to avoid fraying, remove the broken strips of PVC to leave your covering's edge. Your panel is now ready to attach to the frame.



7. Apply the double-sided tape to the frame and press the tape down evenly and firmly onto the wire.



8. Remove the tape's release paper and your frame is now sticky and ready to fix to your panel.

**IF YOUR COVERING IS DIRECTIONAL YOU NEED TO THINK ABOUT WHICH WAY TO ATTACH THE FRAME TO THE PANEL. CHECK TO MAKE SURE YOUR COVER IS THE CORRECT WAY UP BEFORE CONTINUING TO THE NEXT STEP.**



**Do not press down firmly because the surplus fabric needs to be pushed behind (Step 11)**


9. Line up the frame with the PVC edge of the panel. When in the correct position lightly place down.



10. Pinch the fabric, pull taut and fold onto the sticky frame. Snip the covering in line with the eyelets so that the covering can be folded behind.



11. Use the finishing tool to push the fabric behind the frame. If the tool gets bent, cut with scissors to refresh. Force the tool between the gap and swipe around the circumference until you're happy with the finish.

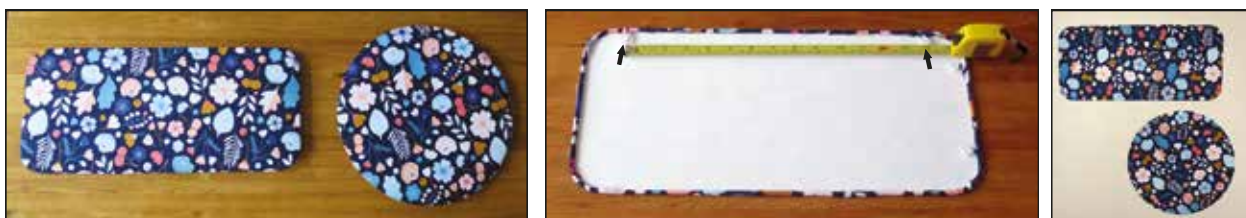

12. Your Wall Art is now complete and is ready to hang using your picture hanging method of choice. If you want to use Panel-Pins, Tacks or Hook Screws measure the distance between the frame's eyelets.

